GE Sensing & Inspection Technologies

Optica™

The Next Generation Humidity Reference Standard

GE's Optica Series chilled mirror hygrometers offer National Institute of Standards and Technologies (NIST)—traceable humidity, temperature and pressure measurements for the connected generation. Now data is accessible from anywhere, any time, from within a browser over the Internet or from your Intranet.



Optica Measures

- Temperature
- Relative humidity (% RH)
- Dew/frost point (Td)
- Absolute humidity (m/v)
- Mass mixing ratio (m/m)
- Volume mixing ratio (v/v)
- Wet bulb (Tw)
- Enthalpy (h)
- Water vapor pressure (e)
- Pressure
- Alarm relays
- Analog outputs









Fundamental dew point measurement is a primary measurement used as a transfer standard for calibrating other humidity instruments and sensors. Chilled mirrors are also the sensors of choice when process and laboratory measurements call for high precision without long term drift. Optica may be used with five, fully interchangeable chilled mirror sensors to provide a measurement range from -112°F to 185°F (-80°C to 85°C) dew point with 0.36°F (0.2°C) or better accuracy. Inputs for a 100 Ω RTD and silicon-based piezoresistive pressure transducer ensure precision measurements, which are used to convert the dew point to any metric, English or user-defined unit of humidity measurement.

Communications

- Ethernet port
- Java-based applet loads in web browsers
- Data logger 6 megabyte memory
- Recorded data uploads in ASCII format
- Exports to spreadsheets
- Real time "strip chart" graphing
- Color VGA or 4 x 40 matrix display

Software

The Optica software is easy to navigate. Users select readout display, strip chart, analog output scale, digital communications, self-diagnostics, cleaning and data logging with intuitive pull-down menus. Setup values can be saved in memory and loaded anytime, either locally or from anywhere via the Ethernet port.

General Number of Data Fields:	Label Equation	Serial Dutput Data Selected Dutputs Sample Listbox Items tabilitabilitab
Dew Point Temperature Pressure Special	Semple Listbox Items tabilabilab	Passmeter 1
Mol Wt Gas	Communications Parameters Mode Beaud rate:	Units Formet Separator
	Parky v Data Bits v Stop Bits v COM Port v	Terminator
Bestere De	Flow Control	Remove K

In the Lab or on the Plant Floor

- Calibration labs
- Process control
- Clean rooms
- Environmental test chambersPrecision HVAC monitoring and control
- Frecision HVAC monitoring
 Fuel cells
- Fuer cells
- Heat exchanger and refrigerant coil calorimeters
- Thermal processing/heat treating
- Semiconductor manufacturing
- Storage areas
- Pharmaceutical validation chambers
- Engine test cells and emissions testing
- Aircraft engines and turbines

Functionality

The Optica simultaneously measures dew point, temperature and pressure. The analyzer is equipped with programmable math functions to produce custom units. In, exp +, -, x and / functions enable derived engineering units to be displayed, recorded and transmitted to data acquisition systems. The analyzer input channel is a standard 4 to 20 mA/0 to 5 VDC input, so the Optica can be connected to any type of process transmitter and be configured to display engineering units.



"Plug and play" setup is easily accomplished with standard connectors for power, sensor and analog outputs.

Chilled Mirror Sensors Theory of Operation

GE's chilled mirror hygrometers are used in standards and metrology labs as well as in industrial applications where precise and repeatable humidity measurement and control is required. The inherent accuracy and long term stability provides many advantages over other types of humidity measurement technologies. Chilled mirrors fundamentally measure the dew or frost point temperature directly by controlling a reflective surface to an equilibrium temperature between dew/frost formation and evaporation, and precisely measuring the temperature of the mirror at this point.

GE's chilled mirrors consist of a small polished hexagonal rhodium, or platinum mirror attached to thermoelectric cooling module (TEC). The Optica analyzer's servo controller applies current to the TEC, which causes the mirror to cool. The mirror is illuminated with a regulated Gas emitter, which transmits light in the infrared spectrum. The light reflected by the mirror is received by a photodetector. When water vapor condenses on the mirror as water or frost (ice crystals), the light received by the photodetector is reduced due to scattering. This results in the servo controller reducing the power causing the mirror to slightly warm. The Optica's control system will modulate the amount of current flowing though the TEC to maintain a temperature where the rate of condensation and evaporation of water molecules and the mass of water on the mirror is constant. The resulting temperature of the mirror is then, fundamentally by definition, equal to the dew or frost point temperature. A precision four-wire platinum RTD imbedded in the mirror measures the temperature. The accuracy of the dew point measurement has been validated to an accuracy of ±0.36°F (±0.2°C) dew/frost point. The precision can also be enhanced to ±0.27°F (±0.15°C) dew/frost point.


Dry bulb temperature is measured with a precise fourwire 100 Ω platinum RTD and pressure is measured with a piezoresistive silicon pressure transducer. The dew/frost point and dry bulb RTD resistance signals are conditioned and amplified by the Optica monitor to display and transmit dew/frost point and temperature. The pressure sensor transmits an amplified 4 to 20 mA signal that is powered by the Optica. The cardinal measurements of dew/frost point, dry bulb temperature and pressure are used to calculate other humidity parameters such as relative humidity, wet bulb, mass mixing ratio, volumetric mixing ratio, absolute humidity, enthalpy and water vapor pressure values using psychometric equations.


The RTD sensor is imbedded in the chilled mirror and never comes in contact with the process or test environment. The wetted parts consist of the platinum or rhodium mirror, a stainless steel or mylar vapor barrier and epoxy sealant. The net result is drift-free humidity measurement designed to maintain accuracy specifications for many years. Chilled mirrors require a nominal flow rate across the mirror to achieve the optimal dew/frost formation and response time. The sensor should either be installed in a duct with moving air or be equipped with a sampling pump. The optimum flow rate is 0.5 to 5 SCFH (0.25 to 2.5 L/min). GE provides sampling systems to temperature condition, regulate the pressure and filter process air prior to reaching the chilled mirror. Our application engineers will discuss your application in detail and provide a recommendation for the system best suited to your needs.

Self Cleaning and Digital Control


For environments where physical contaminants such as dust, oil mist and pollen are present, the use of a sampling system with a filter media is recommended. The filter media must be hydrophobic so as to not absorb or release water vapor into the test stream. Over time the mirror can be etched or pitted by particulate, altering the light scattering characteristics. GE mirrors are field replaceable. The standard rhodium mirror may be upgraded to platinum for industrial applications.

GE developed a patented contamination compensation scheme called PACER® (Program Automatic Error Reduction). The PACER cycle may be initiated manually or by programming a timed cycle. The cycle starts by capturing the data (during the PACER cycle a constant value is transmitted) and cooling the mirror well below the dew point such that a thick dew layer forms on the mirror. The mirror is then rapidly heated. During the heating a significant amount of soluble and some non-soluble contamination is flash evaporated. The contamination left on the mirror tends to aggregate in dry islands or spots (much like a glass that comes out of a dishwasher). This process leaves approximately 85% of the mirror clean. The light signal received by the photodetector is compared against a reference LED/photodetector and the two signals are "balanced," effectively negating the effect of the residual contamination left on the mirror. The PACER cycle works very well, but eventually manual cleaning may be required. All of GE's chilled mirrors are accessible for manual cleaning. Cleaning is a simple process consisting of wiping the mirror with a cotton swab wetted with cleaning solution or distilled water. (Distilled water is recommended as the final cleaning agent.)

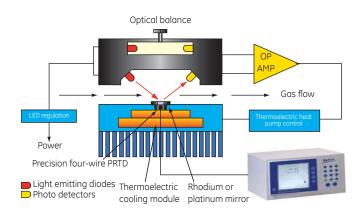

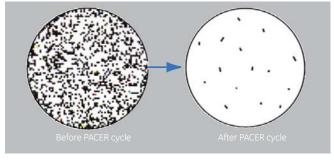


PACER cycle

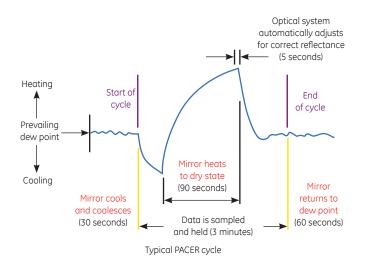

GE developed Digiloop[™] control to overcome the limitations of traditional analog PID (Proportional Integral and Derivative) control. Analog temperature control produces oscillations particularly at high or trace humidity levels. It is difficult to apply self-tuning or PID constants to analog control loops, which are over damped or under damped. Digiloop utilizes digital sampling and feed-forward control by taking time-based samples when the dew point is within a predetermined proportional band. By recording the oscillations, the digital control effectively predicts the magnitude of change and adjusts the current to the thermoelectric cooling module, which steps the mirror temperature in 0.09°F (0.05°C) increments. This results in a significantly improved control and dew point precision.



Analog control

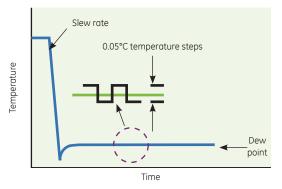

Digiloop control

Optica Specifications

Color VGA with data logger and Ethernet communications available in bench, rack or wall mount styles

Power

95 to 265 VAC, 50/60 Hz, 200 watts

Electrical I/O

IEC-style AC receptacle (bench mount), screw terminal block (wall mount), multipin chilled mirror and temperature sensor/cable connectors, screw terminals for analog outputs, DB-9 for RS232 and 10 base-T for Ethernet

Measured Parameters

Dew point, temperature and 4 to 20 mA/0 to 5 VDC

Calculated Parameters

Relative humidity, wet bulb, mass mixing ratio, volumetric mixing ratio, absolute humidity, water vapor pressure and enthalpy in English and metric units, as well as userconfigured units

Inputs

1/3 Class A DIN 43760, 100 Ω RTD and dew/frost point and dry bulb temperature. Loop powered 4 to 20 mA DC at 500 Ω maximum load

Accuracy


System accuracy ±0.36°F (±0.2°C) for dew/frost point, ±0.27°F (±0.15°C) for temperature, 0.5% full scale (FS) for pressure

Range Governed by sensor

Hystersis Negligible

Sensitivity 0.1% FS

A/D 16 bit

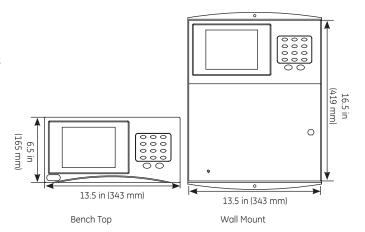

Data Logger Memory 6 megabytes

Display

1/4 color VGA enables up to six parameters to be displayed

Operating Temperature

32°F to 122°F (0°C to 50°C)

Cooling Rate 0.27°F (1.5°C)/sec typical above 32°F (0°C)

Digital Interface RS232 port, Ethernet port*

Digital Output Format

Data ASCII text, Ethernet java applet password protected*

TCP/IP Address User programmable*

Analog Outputs

(2) 4 to 20 mA and 0 to 5 VDC, user configurable and scalable

Analog Outputs

(2) 5 A at 250 V, form C, (SPDT) relays

Enclosure

Benchtop: Type 1 Wall Mount: Type 4

Weight

Benchtop:	8 lb (3.6 kg)
Wall Mount:	10 lb (4.5 kg)

1111H Single-Stage Chilled Mirror Specifications

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

Dew/Frost Point Accuracy

 Standard:
 ±0.36°F (±0.2°C)

 Optional:
 ±0.27°F (±0.15°C)

Sensitivity >0.05°F (>0.03°C)

Repeatability ±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Single stage thermoelectric cooling (TEC) module

Auxiliary Cooling Not applicable

Depression 81°F (45°C) at 77°F (25°C) dry bulb and atmospheric pressure

Typical Measurement Range


5°F to 77°F (-15°C to 25°C) dew/frost point (Td) in air @ 77°F (25°C) and atmospheric pressure. Equivalent to 5% to 100% RH. Other humidity parameters based on calculations.

Sample Flow 0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature 5°F to 176°F (-15°C to 80°C)

Pressure -3 to 200 psig (0.8 to 15 bar)

Power Derived from Optica

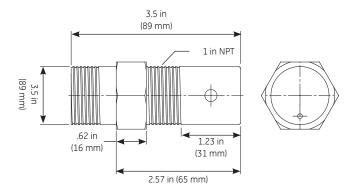

Sensor Body Epoxy-coated aluminum

Filter

Polytetrafluoroethylene (PTFE) filter (standard on 1111H-GE)

Mirror

Standard: Optional: Rhodium-plated copper Solid platinum

Sensor Wetted Material Aluminum, copper, mylar, PTFE, rhodium or platinum

Vapor Barrier Mylar

Electrical Connector MS-style multipin connector

Weight

1 lb (1.4 kg) net

MB-11	Wall mounting bracket
PTFE-GE	PTFE filter
Ρ	Platinum mirror
X	Enhanced accuracy ±0.27°F (±0.15°C) Td
0111D	Pressure boss (1111H only)

D2 Two-Stage Chilled Mirror Specifications

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

±0.27°F (±0.15°C)

Dew/Frost Point Accuracy Standard: ±0.36°F (±0.2°C)

Standard: Optional:

Sensitivity >0.05°F (>0.03°C)

Repeatability

±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Two-stage TEC module

Auxiliary Cooling Not applicable

Depression 117°F (65°C) at 77°F (25°C) and atmospheric pressure

Typical Measurement Range

31°F to 77°F (-35°C to 25°C) dew/frost point (Td) in air @ 77°F (25°C) and atmospheric pressure. Equivalent to 0.7% to 100% RH. *Other parameters based on calculations.*

Sample Flow 0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature

-13°F to 185°F (-25°C to 85°C)


Pressure 150 psig (11 bar) maximum

Power Derived from Optica monitor


Sensor Body Cast aluminum with 314 stainless steel flow cell

Mirror

Standard: Rhodium-plated copper Optional: Solid platinum

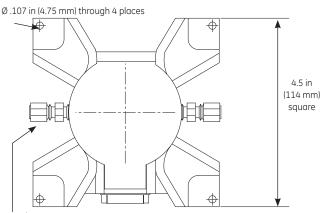

1/4 in compression stainless steel

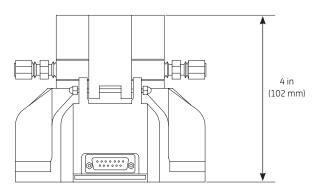

Sensor Wetted Material

302, 316 stainless steel, silicone o-ring, BK-7 glass, rhodium or platinum mirror

Vapor Barrier

Stainless steel

Inlet/Outlet

1/4 in OD tubing compression fittings

Electrical Connector

Sub-D 15-pin connector mates with 2130 cable

Weight

4 lb (1.8 kg) net

- P Platinum mirror
- X Enhanced accuracy ±0.27°F (±0.15°C) Td

1211H Two-Stage Chilled Mirror Specifications

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

Dew/Frost Point Accuracy

 Standard:
 ±0.36°F (±0.2°C)

 Optional:
 ±0.27°F (±0.15°C)

Sensitivity >0.05°F (>0.03°C)

Repeatability

±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Two-stage TEC module

Depression 117°F (65°C) at 77°F (25°C) and atmospheric pressure

Typical Measurement Range

31°F to 77°F (-35°C to 25°C) dew/frost point (Td) in air @ 77°F (25°C) and atmospheric pressure. Equivalent to 0.7% to 100% RH. Other parameters based on calculations.


Sample Flow 0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature 5°F to 212°F (-15°C to 100°C)

Pressure 300 psig (21 bar) maximum

Power Derived from Optica

Sensor Body Cast aluminum with 314 stainless steel flow cell

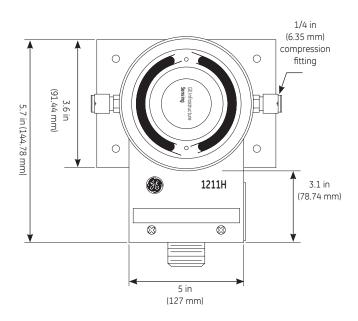

Mirror Standard:

Optional:

Rhodium-plated copper Solid platinum

Sensor Wetted Material

302, 316 stainless steel, silicone o-ring, BK-7 glass, rhodium or platinum mirror

Vapor Barrier Mylar (upgradable to stainless steel)

Inlet/Outlet 1/4 in OD tubing compression fittings

Electrical Connector

MS-style multipin connector mates with 2120 cable

Weight

4 lb (1.8 kg) net

Ρ	Platinum mirror
x	Enhanced accuracy ±0.27°F (±0.15°C) Td
S	Stainless steel vapor barrier

SIM-12 Heated Two-Stage **Chilled Mirror Specifications**

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

±0.27°F (±0.15°C)

Dew/Frost Point Accuracy ±0.36°F (±0.2°C)

Standard: Optional:

Sensitivity >0.05°F (>0.03°C)

Repeatability

±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Two-stage TEC module

Auxiliary Cooling Not applicable

Depression

153°F (85°C) at 167°F (75°C) body temperature and atmospheric pressure

Typical Measurement Range

14°F to 167°F (-10°C to 75°C) dew/frost point (Td) in air @ 167°F (75°C) body temperature in 77°F (25°C) ambient temperature and atmospheric pressure. Equivalent to 0.7% to 100% RH. Other parameters based on calculations.

Sample Flow


0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature

5°F to 212°F (-15°C to 100°C)

Heater Control

Thermostatically controlled. Set point of 77°F (25°C), 104°F (40°C), 131°F (55°C), 158°F (70°C), 185°F (85°C) and 212°F (100°C)

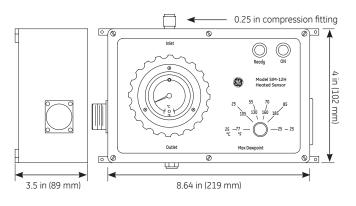

Pressure

50 psig (4.5 bar) maximum 100/115/230 VAC, 50/60 Hz, 75 watts

Sensor Body Cast aluminum with 314 stainless steel flow cell

Sensor Wetted Material

302, 316 stainless steel, silicone o-ring, BK-7 glass, rhodium or platinum mirror

Solid platinum

Rhodium plated copper

Mirror

Standard: Optional:

Vapor Barrier

Mylar (upgradable to stainless steel)

Electrical Connector

MS-style multipin connector IEC receptacle for AC power

Weight

7 lb (3.2 kg) net

Accessories

Ρ Platinum mirror Enhanced accuracy ±0.27°F (±0.15°C) Td Х Stainless steel vapor barrier S **HSS-12** Heated sampling system. SIM-12 heated chilled mirror, SIM-HFT heated filter module and SIM-HFM heated flowmeter mounted on

a plate with SIM-HSL heated sample line.

1311-DR Four-Stage Chilled Mirror Specifications

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

Dew/Frost Point Accuracy

 Standard:
 ±0.36°F (±0.2°C)

 Optional:
 ±0.27°F (±0.15°C)

Sensitivity >0.05°F (>0.03°C)

Repeatability

±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Four-stage TEC module

Auxiliary Cooling Liquid cooling jacket

Depression, Air Cooled 171°F (95°C) at 77°F (25°C) and atmospheric pressure

Depression, Liquid Cooled 189°F (105°C) with 59°F (15°C) cooling water

Typical Measurement Range

- -85°F to 77°F (-65°C to 25°C) dew/frost point (Td) in air
 @ 77°F (25°C) and atmospheric pressure.
- -103°F to 59°F (-75°C to 15°C) in liquid-cooled mode with 59°F (15°C) coolant.

Other parameters based on calculations.


Sample Flow 0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature 32°F to 95°F (0°C to 35°C)

Pressure 300 psig (22 bar) maximum

Power

100/115/230 VAC, 50/60 Hz, 300 watts

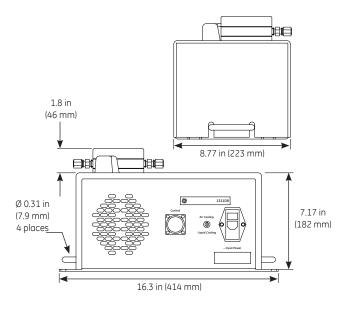

Sensor Body

Cast aluminum with 314 stainless steel flow cell

Solid platinum

Mirror

Standard: Optional:

Sensor Wetted Material

302, 316 stainless steel, silicone o-ring, BK-7 glass, rhodium or platinum mirror

Rhodium-plated copper

Vapor Barrier

Mylar (upgradable to stainless steel)

Inlet/Outlet

1/4 in (6 mm) OD tubing compression fittings

Electrical Connector

MS-style multipin connector mates IEC receptacle for AC power

Weight

34 lb (16 kg) net

Ρ	Platinum mirror
X	Enhanced accuracy ±0.27°F (±0.15°C) Td
S	Stainless steel vapor barrier

1311-XR Five-Stage Chilled Mirror Specifications

Sensing Element

Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @ 32°F (0°C)

Dew/Frost Point Accuracy Standard: ±0.27°F (±0.15°C)

Sensitivity >0.05°F (>0.03°C)

Repeatability ±0.09°F (±0.05°C)

Hysteresis Negligible

Cooling Stages Five-stage TEC module

Auxiliary Cooling Liquid cooling jacket


Depression, Liquid Cooled 202°F (112°C) with 59°F (15°C) cooling water


Typical Measurement Range -112°F to 59°F (-80°C to 15°C) dew/frost point (Td) in air @ 77°F (25°C) and atmospheric pressure with 59°F (15°C) cooling water. *Other parameters based on calculations.*

Sample Flow 0.5 to 5.0 SCFH (0.25 to 2.5 L/min)

Operating Temperature 32°F to 95°F (0°C to 35°C)

Pressure 0 to 100 psig (1 to 8 bar)

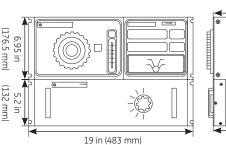



Power 115/230 VAC, 50/60 Hz, 700 watts

Sensor Body 314 stainless steel

Mirror Standard: Optional:

Rhodium-plated copper Solid platinum

Sensor Wetted Material 302, 316 stainless steel, silicone o-ring, BK-7 glass, rhodium or platinum mirror

Vapor Barrier Mylar (upgradable to stainless steel)

Inlet/Outlet 1/4 in OD tubing compression fittings

Electrical Connector MS-style multipin connector IEC receptacle for AC power

Weight 50 lb (26 kg) net

- P Platinum mirror
- S Stainless steel vapor barrier

T-100 Four-Wire PRTD **Temperature Mirror Specifications**

Sensing Element Four-wire 1/3 Class A DIN 43760 RPT, 100 Ω @32°F (0°C)

Accuracy

System at 25°C Standard: Optional:

±0.27°F (±0.15°C) ±0.18°F (±0.1°C)

Measurement Range -148°F to 212°F (-100°C to 100°C)

Response Time


7 seconds for 77°F to 158°F (25°C to 70°C) step change in fluid

Sensor Body

Stainless steel sheath

Cable

PTFE insulation rated to 302°F (150°C). 10 ft (3 m) standard length.

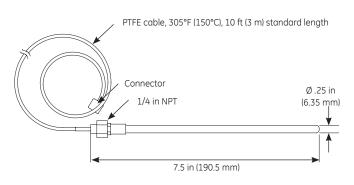

Fittings

Adjustable 1/4 in NPT stainless steel compression fitting

Strain Relief Stainless steel spring

Power Low voltage derived from Optica

Weight 2 lb (0.9 kg) net

Options Additional cable length

PT Series Pressure Transducer Specifications

Sensing Element Micro-machined silicon strain gauge

Accuracy System at 77°F (25°C), ±0.5% of full scale

Range PT-30A 0 to 30 psia (0 to 2 bar)

Range PT-300A 0 to 300 psia (0 to 21 bar)

Response Time 1 second for 90% of steady state (10% to 90% change)

Operating Ranges

• -4°F to 176°F (-20°C to 80°C) ambient temperature


• -13°F to 248°F (-25°C to 120°C) process temperature

Temperature Effect

<1% FS on accuracy from 14°F to 122°F (-10°C to 50°C) for pressure 6 psi (0.4 bar)

Power

9 to 30 VDC. Derived from Optica monitor.

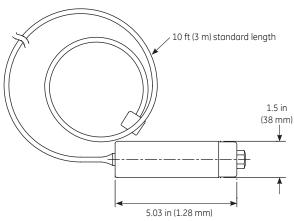

Sensor Body Material 316 stainless steel

Sensor Wetted Material 316 stainless steel and Hastelloy diaphragm

Cable


PVC insulation. 10 ft (3 m) standard length process connection 1/4 in F-NPT

Weight 4 lb (1.8 kg) net

Chilled Mirror Sensor Depression


1111H Single-Stage Chilled Mirror

45°C depression

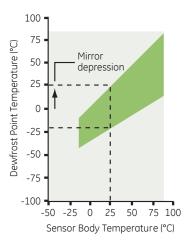


D2 Two-Stage Chilled Mirror Sensor Body Temperature °C

65°C depression

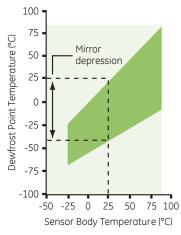


1311-DR Four-Stage Chilled Mirror Sensor Body Temperature °C

95°C depression

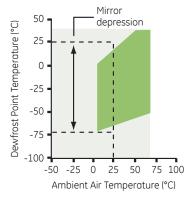


1211H Two-Stage Chilled Mirror Sensor Body Temperature °C

65°C depression

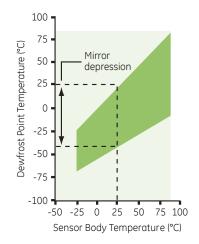


SIM-12 Heated Two-Stage Chilled Mirror Sensor Body Temperature °C



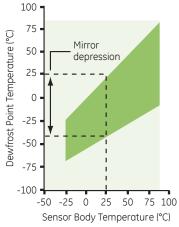

1311-XR Five-Stage Chilled Mirror Sensor Body Temperature °C

112°C depression

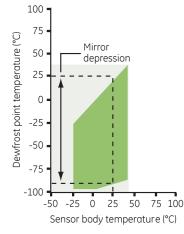

Accessories

SSM Sampling System Specifications

Enclosure Polycarbonate

Fittings Brass 1/4 in OD tubing

Compression Internal Tubing Impolene

Rotameter 0.5 to 5 SCFH (0.2 to 2 L/min)

Maximum Vacuum -98 in (-250 mm) of Hg

Free Air Displacement 14 SCFH (6.5 L/min)

Maximum Temperature 100°F (38°C)

Power 95 to 265 VAC, 50/60 Hz, 15 watts

FM-1 Rotameter/Needle Valve


Materials Clear acrylic body, Buna-N Seals, black glass float, brass valves

Fittings 1/4 in compression

Range 0.5 to 5 SCFH (0.2 to 2 L/min)

Pressure 100 psig (6 bar) maximum

Temperature 150°F (65°C) maximum

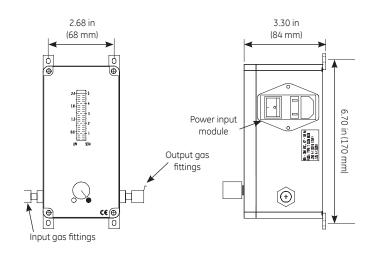

BF-10DX General Purpose Filter

Recommended for dew points ≥32°F (≥0°C)

Materials Anodized aluminum head, nylon bowl, nylon internals, Buna-N Seals

Fittings 1/4 in compression

Temperature -150°F to 220°F (-101°C to 104°C)

Filter Borosilicate glass

Porosity 93% of particles over 0.1 µm

Pressure 150 psig (10 bar) maximum

BF-12SS Box of 10 replacement filter elements

BF-12SS Stainless Steel Filter

Recommended for dew points $\leq 32^{\circ}F (\leq 0^{\circ}C)$

Materials

316 stainless steel head, bowl and internals. Viton seals

Fittings

1/4 in (6 mm) compression

Temperature

-150°F to 220°F (-101°C to 104°C)


Filter Borosilicate glass

Porosity 93% of particles over 0.1 µm

Pressure 340 bar (5000 psig) maximum

BF-12SS

Box of ten replacement filter elements

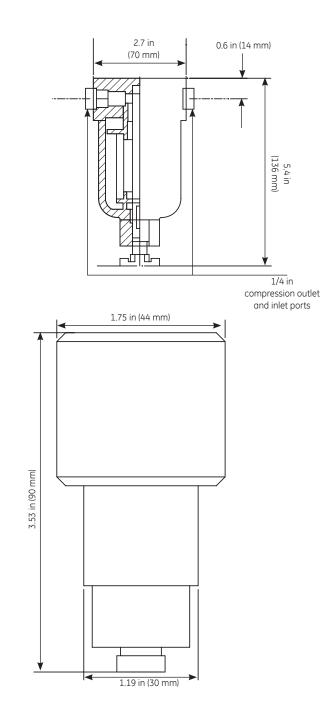

Ordering Code Guide

O P A 1 0 A C 1 A O

Optica Monitor

Color VGA Display With Logger/Ethernet

- A Benchtop
- B Benchtop with rack mount bracket
- C Wall mount

Optica Channel One

- 1 Unit to be sold with new chilled mirror (see sensor section)
- 2 Use the existing D2 (conversion cable 2160 required)
- **3** Use with existing 1111H, 1211H, SIM-12H and 1311DR (conversion cable 2160 required)
- 4 Use with existing 1311XR (conversion cable 2140 required) 1 Unit to be sold with new chilled mirror (see sensor section)

Default Code

0 Default code

Chilled Mirror Cable

Cable Type

- 0 No cable required
- C Adaptor cable for existing sensor/cable installation 2 ft (.61 m)
- A 10 ft (3 m) standard length
- X Specify length in ft (m)
- **2120** For use with 1111H, 1211H, SIM12, HSS-12, 1311DR sensors
- **2130** For use with D2
- **2140** For use with 1311XR
- **2150** For use with Optica CCD sensor
- 2160 Adaptor cable for sensors except 1311XR 2 ft (0.61 mm)
- 2170 Adaptor cable for 1311XR 2 ft (0.61 mm)

Chilled Mirror Sensor

Sensor

- 0 No sensor
- A 1111HB 1111H-GE
- C D2
- D 1211H



SIM-12	2
E	100 VAC
F	115 VAC
G	230 VAC
HSS-12	2
н	100 VAC
J	115 VAC
К	230 VAC
1311D	R
L	100 VAC
М	115 VAC

1311XR

N

Р	100 VAC
Q	115 VAC
	270140

230 VAC

R 230 VAC

Accuracy and Mirror

- 1 S/R/M standard accuracy, rhodium mirror, mylar vapor barrier
- 2 S/P/M standard accuracy, platinum mirror, mylar vapor barrier
- 3 S/P/P standard accuracy, platinum mirror, stainless steel vapor barrier
- 4 X/R/M enhanced accuracy, rhodium mirror, mylar vapor barrier
- 5 X/P/M enhanced accuracy, platinum mirror, mylar vapor barrier
- 6 X/P/P enhanced accuracy, platinum mirror, stainless steel vapor barrier
- 7 S/R/P standard accuracy, rhodium mirror, stainless steel vapor barrier (D2)
- 8 X/R/P enhanced accuracy, rhodium mirror, stainless steel vapor barrier (D2)
- 9 **S/P/P** standard accuracy, platinum mirror, stainless steel vapor barrier (D2)

Temperature Sensor

Sensor

- 0 No temperature sensor
- A T-100 with 10 ft (3 m) cable (standard accuracy)
- B T-100 with 10 ft (3 m) cable (enhanced accuracy)
- X T-100 with build to fit cable (standard accuracy)
- Z T-100 with 10 ft (3 m) cable (enhanced accuracy)

Pressure Sensors

- 0 No pressure sensor
- A PT-30A 10 ft (3 m) cable (standard)
- B PT-30A build-to-fit cable
- X PT-300A 10 ft (3 m) cable (standard)
- Z PT-300A build-to-fit cable

www.gesensinginspection.com